InRoads

Calculating End-Area Volumes

Did you know when calculating End-Area volumes from cross sections, the InRoads family of products automatically draws the cut and fill areas at the same exaggeration as the cross sections? However, the true area is used and annotated in the volume calculations. Your CAD software calculates the area based on the exaggerated shape, not the true shape.