<u>InRoads</u>

Cross Section to Surface

Did you know that you can add the points from a cross section surface to a DTM by using the Evaluation > Cross Section > Cross Section to Surface command?