

# MicroStation

## *Version of CDOT Configuration*

The way that you can tell the version of the configuration you are running is to open up MicroStation and *Hover* over the CDOT Icon on the Main Tool Bar Menu. You will see both a pop-up and a message in the lower left hand corner of the Status Bar.