## **MicroStation**

## Angular Dimensioning Tool

**Did you know** that you can force the arrow heads to the inside of an angular dimension using the angle between lines command? If you go to the Dimension Styles > Terminators category and change the minimum leader value to 0 this will swing the arrow heads to the inside of the angled lines, as long as the text will also fall within this space. Remember to select the Reset Style so the setting will return to the default setting of Min. Leader 2.500000 when complete. That way all other dimensioning will act as expected. <u>*Click*</u> to view the commands.

▶ + 圖 / 閣2: II N N N N N N N N N N N N N N N N N N	Elle Custom Symbols Dimension Lines Dimension With Leader Extension Lines Place Note Placement Terminators Terminator Symbols Text Tolerance Tool Settings Units Unit Format	Orientation	Dimensioning     It Style     It Style
	Focus Item Description Set the space, in text heig	nt units, between extension lines and dimen	ision text