

## MicroStation

### *Updating Annotation Scale*

**Did you know** that if you've got a file that came from the V7 MicroStation, the text will not have annotation scale applied to it? To do so, turn on the *Annotation Scale Lock* and *Key-In: annotationscale add*. This global keyin will apply the annotation scale of the active model to all text elements in that model. Other *Key-In* commands are: *annotationscale remove* which removes the annotation scale from the file and *annotationscale change 20:1* which actually changes the annotation scale of all text within a file by the ratio given.