




## CDOT Consultant Server Setup.pdf

- The exe folder in the configuration must be copied onto the user's computer in order for the programs to function properly. The *exes* folder should be placed in the following location: *C:\Program Files\Workspace-CDOT\Standards-Global\MicroStation\*. This is required because the custom extensions are built on .NET framework and there are Windows securities that forbid running them on a server.

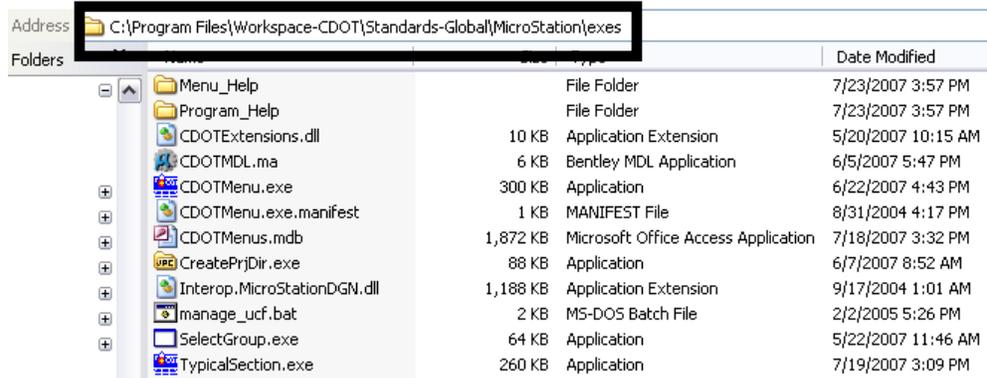

- For those using the *CreatePrjDir.exe*, copy the following workspace folders (and their data) to the *C:\Program Files\* directory:

*Workspace-CDOT\Standards-Local\Projects*


*Workspace-CDOT\Standards-Global\InRoads\Preferences*

*Workspace-CDOT\Standards-Global\MicroStation\Sheet Borders*

The pcf file created by the *CreatePrjDir.exe* program will be placed in the following location on the computer used to run the program:


*C:\Program Files\Workspace-CDOT\Standards-Local\Projects\*

- Copy this pcf file to the *S:\Client Standards\CDOT\Workspace-CDOT\Standards-Local\Projects*. All users accessing this project will use the pcf file located on the server because the MicroStation configuration variables point to this directory.
- Below is an example of the folder structure required on the local drive for those using the *CreatePrjDir.exe*:

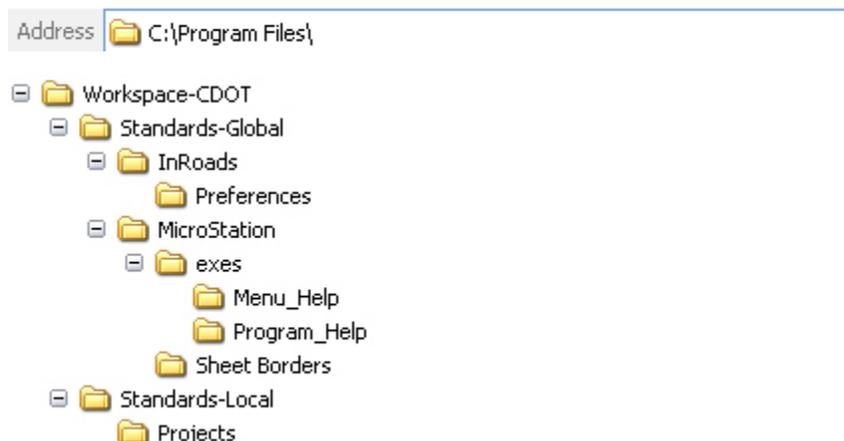

## CDOT Consultant Server Setup.pdf

8. The folder structure required on the local drive for those not using the *CreatePrjDir.exe* is:

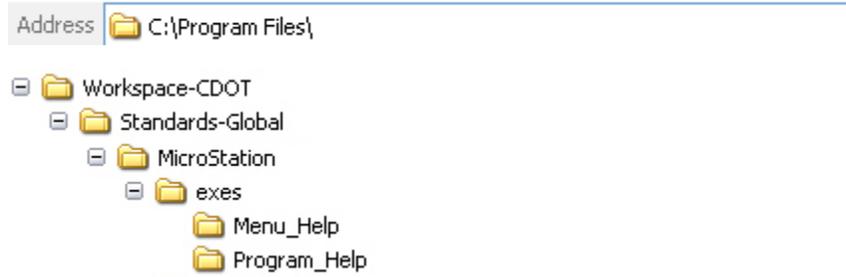

These folders and files do not control the resources used by the program.

9. Follow step 14 on the installation instructions to deactivate the workspaces.