Workflow IR 13 - Editing Feature Styles for Display in Cross Sections

This document guides you through the process of setting a feature style to display in cross sections. Displaying a feature in cross sections allows the designer to see the relative position of the features and to annotate individual features.

Note: The changes made using this workflow occur in the XIN file. If you wish to save these changes past the current login session, the XIN file must be saved to a different location. Use the Save As option and store the file in the project directory.

In this example, we wish to display the T_Edge of Parking Lot features in the cross sections to see if our toe of slope encroaches into the parking lot.

Workflow Outline

Opening Style Manager - Style Manager is the interface used to edit the xin file, where the feature style definitions are stored.

- Commands Used: **Tools > Style Manager -** Used to display the Style Manager dialog box.
- Edit Style And alternate method for displaying the Style Manager dialog box. This button is found on the Update Cross Section > Crossing Features leaf of the Cross Section dialog box.

Selecting a Style to Edit - Within the Style Manager dialog box, there are some items that can make locating the desired Style easier to find. This step is skipped when the Edit Style button is selected from the Cross Section dialog box.

- Commands Used: Show Styles with Properties > Include Surface This option is used to remove any non-surface feature styles from the Features list.
- Edit (button) Used to display the Edit Style dialog box. This is where feature style data is modified.
- Surface Features This is the leaf of the Edit Style dialog box where the first changes are made.

Editing the Style - Changing the Style's display settings allows the feature to be displayed in the cross section set. Editing the Named Symbology allows the user to determine how that feature is displayed.


- Make Style Settings Changes Use the toggles to turn on the Cross Section Display. This sets the style so that the feature can be displayed.
- Make Symbology Settings Changes These determine how the feature will look when displayed in the cross section set. These changes are made to the Named Symbology attached to the Feature Style.
 - Commands Used: **Surface Feature > Symbology -** This is the leaf of the Edit Style dialog box that provides access to the Named Symbology editor.
 - **Edit the Symbology** Select the Symbology type to edit (either Default Point or Cross Section Point). Make changes in the Point Symbology dialog box.

Opening the Style Manager and Selecting a Style to Edit

The display settings for features is accessed through the *Style Manager*. There are various ways to open Style Manager, depending on which dialog boxes are open. Here, opening the Style Manager from the InRoads main dialog box and from the Cross Sections dialog box is described.

Opening the Style Manager from the Main InRoads Dialog Box


1. From the InRoads main menu, select **Tools > Style Manager**. This displays the **Style Manager** dialog box.

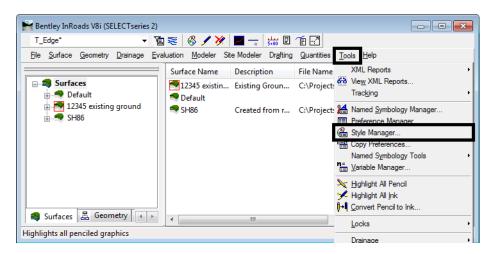

- 2. In the *Style Manager* dialog box Show *Styles with Properties* area, toggle on **Include Surface**. This filters out all styles that are not surface styles, reducing the number of items in the style list to search through.
- 3. In the styles list at the bottom of the dialog box, highlight the desired style (in this example T_Edge of Oil Parking Lot)
- 4. **<D>** the **Edit** button to display the *Edit Style* dialog box. You can also **<D> <D>** on the style in the list to open the dialog box.

🐂 Style Manager				, • •
Show Stules with Properties I include Surface Include Geometry Point Include Geometry Line Include Geometry Arc Include Geometry Spiral Include Survey	Surface Properties Display Plan Display Cross Section Display Profile Pay Item Survey Properties Custom Operations	Geometry Tabling Point Tabling Une Tabling Arc Tabling Spiral Tabling Attributes		Close New Edit Copy opy Settings Delete Rename Help
Preference File: C:\Workspace\V	Description		Numeric Code	Pay Ite 🔺
T Edge of Oil	Edge of Oil	1	310	
T_Edge of Oil Parking Lot	Edge of Oil Parking	. 1	314	
I_Edge of Parking Lot>Gravel	Edge of Parking Lo		334	
T_Edge of Water>Canals>Conc	Edge of Water-Can	. 1	B13	
T_Edge of Water>Canals>Dirt	Edge of Water-Can	. 1	B12	
T_Edge of Water>Other	Edge of Water-Oth 1818			
T_Edge of Water>Ponds Lakes	Edge of Water-Pon 1817			
T_Edge of Water>Rivers	Edge of Water-Riv 1816			
T_Edge of Water>Streams	Edge of Water-Stre	1	815	

5. In the *Edit Style* dialog box, expand the Surface Feature folder.

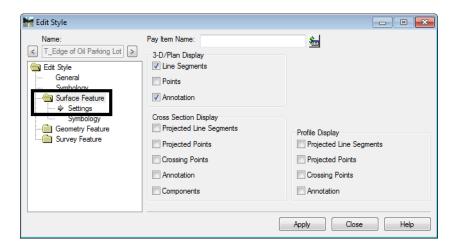

This takes us to the point where the style will be edited.

Opening Style Manager from the Cross Sections Dialog Box

Usually, you will discover that a particular feature is not set up for display in cross sections or profiles when you are using the Update Cross Sections or the Update Profile commands. Because of this, InRoads has provided access to the Style Manager directly from the Cross Sections and Update Profile dialog boxes.

In this example, the Cross Sections dialog box is used.

- 1. In the *Cross Sections* dialog box, expand the Update Cross Section folder and select Crossing Features.
- 2. In the *Surfaces* area, highlight the surface that has the features to be displayed (in this example **12345 Existing Ground** is used).
- 3. In the *Feature* area, highlight the desired feature (in this example T_Edge of Parking Lot is used).
- 4. Notice that the feature is grayed out. This indicates that the feature cannot be displayed in cross section.

5. **<D>** the **Edit Style** button. This displays the *Edit Style* dialog box.


K Cross Sections			- • •
File			
Cross Section Set: SH 86 Create Cross Section Create Cross Section Update Cross Section Connerat Connerate Connerat Connerat Connerat Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connerate Connera	Mode: Refresh Display Start: 203+80.28 Stop Surface: Name Default 12345 existing ground SH86	r On Display Off c: 260+43.16 Description Existing Ground from multi Created from roadway de	
	Feature: Name T_Edge of Parking Lot T_Edge of Vater>Rivers T_Edge of Water>Rivers T_Edge of Water T_Edge of Wate	Style T_Edge of Oil Parking L T_Edge of Water>River T_Edge of Water>River T_Edge of Water>River T_Edge of Water>River	+
		Apply Preferences	Edit Style Filter Close Help

This method takes you directly to the Surface Feature folder of the Edit Style dialog box.

Editing the Style

Two settings are required for the feature to be displayed; the display option must be toggled on and the Named Symbology must be set up.

- 1. In the *Edit Style* dialog box, toggle on the desired display option (in this example **Crossing Points** from the *Cross Section Display* area is used).
- 2. **<D>** the **Apply** button. This saves the setting to the XIN file.

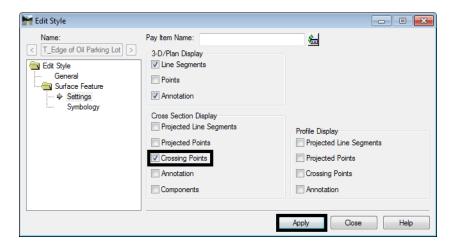

This allows the feature to be displayed in the cross section but does not setup the symbology for its display. The steps below describe how to set up the symbology.

- 3. Highlight the Symbology in the *Edit Style* explorer.
- 4. **<D>** the **Edit** button in the *Symbology* area of the dialog box. This displays the *Edit Named Symbology* dialog box.

🕌 Edit Style			- • 💌
Name: C T_Edge of OI Parking Lot > General Surface Feature Settions \$ Symbology	Symbology Name:	T_Edge of Oil Parking Lot	e Help

5. In the *Edit Named Symbology* dialog box, highlight Cross Section Point from the Symbology list and <D> Edit. This displays the Point Symbology dialog box.


lame:	T_Edge of Oil Parking Lot		Apply
Description:	_Edge	of Oil Parking Lot	Close
Symbology			
Use		Level	
Default Line		TOPO_ROADWAY_Edge-Of-fBYL	
Default Text		TOPO_ROADWAY_Edge-Of-FBYL	
Default Point		Not Initialized	
Plan Line		Not Initialized	Copy
Plan Text		Not Initialized	
Plan Point		Not Initialized	Help
Profile Line		Not Initialized	
Profile Text		Not Initialized	
Profile Point		Not Initialized	
Cross Section	Line	Not Initialized	
Cross Section	Text	Not Initialized	
Cross Section	Point	Not Initialized	
		Uninitialize Edit	

- 6. In the **Point Symbology** dialog box, toggle on the desired Display option (in this example **Symbol Display** is used).
- 7. Select the desired **Symbol** or **Cell** used for the feature display (in this example the **Plus Sign** is used).
- 8. Select the desired Level for the feature (in this example TOPO_ROADWAY-Edge-Of-Parking-Lot was used)
- 9. Set the *Color* and *Weight* to By Level.
- 10. Set the desired *Height* and *Width* for the symbol.

11. **<D>** the **OK** button to accept the changes. This dismisses the **Point Symbology** dialog box.

🐂 Point Sy	mbology				- • ×
	Symbol	_		Cell	ОК
Display:	Plus Sign 👻				Cancel
Color:	TOPO_ROADWAY_Edge-Of-1 ByLevel				Help
Weight:	(1)ByLevel 👻		Display:		-
Font			Level:	ALG_COGO_Points	-
Character:	+		X Scale:	1.0000	
Height:	0.10		Y Scale:	1.0000	
Width:	0.10	F	Z Scale:	1.0000	
Angle Relative to Object Angle Angle Angle: 0^00'00''			Rotation Angle F Absolut Angle:		

12. In the *Edit Named Symbology* dialog box, <D> Apply then <D> Close.

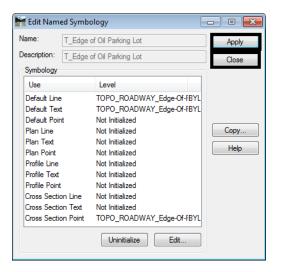

13. In the *Edit Style* dialog box, <D> Apply then <D> Close.

🕌 Edit Style			- • •
Name: T_Edge of OI Parking Lot Edit Style General Symbology Surface Feature Settings Symbology Geometry Feature Survey Feature Survey Feature	Symbology Name:	T_Edge of Oil Parking Lot	
		Apply	ose Help

This completes the changes required in the XIN file. The features can now be added to the cross sections using the Update Cross Section command.

Note: This change will be available only until the next login on your computer. If you wish to save the change for future use, **Save As** the *CDOT_Civil.xin* file to your project directory.