## Workflow MS 8 - Title Sheet Vicinity Map

This document defines the procedure for inserting a Vicinity Map into the Project Title Sheet.

## **Vicinity Map Insertion Procedure**

- 1. Open the project title sheet from the ProjectWise project location or from the local project directory.
- County Maps for all counties within Colorado have been translated from GIS information, and can be found on the Shared Drive <u>\public\CADD County Maps\</u>. These maps are used to build your Vicinity Map. The County of interest should be copied to your Drawings folder so it can then be attached as a reference file to the Title Map. The local map can be edited as desired without affecting the original.
- *Note:* If choosing to attach the map directly from the Shared Drive as a reference file, the map will remain in a read-only state. No editing will be allowed nor will saving additional views be permitted.

## **Title Map Example**



## **Reference File Attachment**

The county map will be attached as a reference file to the Title Sheet.

1. Select *File > Reference* to open the *References* dialog box.

 Select *Tools > Attach*, navigate to the correct directory, select the file and double-click on the file name to add it to the list of *Selected Documents*, then *<D> OK*.

Documents						
Folder 💓 Drav	vings				•	+ 🔰 💷 🔯
M .						• •
Name		File Name	Project Out to	Version Designer	Detailer	•
Adams.d	gn	Adams.dgn	93222	1		1 🛛
/ Bibtemp13.dgn		jbtemp13.dgn	93222	1		•
John John Market John Marke		jbtest-DES_GenINot	93222	1		
/ 📈 jbtest-DE	S_GenINote_2010.dgn	jbtest-DES_GenINot	93222	1		
/ M JPC#DES	_GenINcte_2007.dgn	JPC#DES_GenINote	93222	1		-
• [		III			•	
Application:	All Applications					•
Extension:	*.dgn;*.dwg;*.dxf					٣
		Add	Remove			
Selected Document	s					
Name			File Name		Project Co	ode Out to
Adams.d	gn		Adams.dgn		93222	
4						
						•
Attachment method	d: Interactive					-


The *Reference Attachment Settings* dialog box will appear. The Map has been designed to be inserted at a scale factor of 1:5280 (Master: Reference).

- 3. *<D>* the "+" next to *Standard Views* and select *Top*.
- 4. Set the scale to 1:5280 as shown below.
- 5. **<D> OK**.

Reference Atta	achment Settings for Adams.dgn	83
File Name:	Adams.dgn	
Full Path:	C:\yrb\Adams.dgn	
Model:	Default -	
Logical Name:	Тор	1
Description:		Ī
Orientation:		
View	Description	
Coincident	Aligned with Master File	
Coincident - W		
Standard View	15	_
Тор		
Saved Views		
Named Fence	es (none)	
Detail S	Scale: CUSTOM 🔹	
Scale (Master:	:Ref): 1.000000 : 5280.000000	
Named G	rou <u>p</u> :	
Rev	ision:	
L	.e <u>v</u> el:	
Nested Attachm	nents: No Nesting   Depth: 1	
Display Oven	rides: Allow	
Ne <u>w</u> Level Dis	splay: Use MS_REF_NEWLEVELDI#	
Global LineStyle S	icale: Master	
Synchro	nize with Saved View	
Toggles		
	🖸 😹 🍋 🛄 🎢 🎝 🐓 🏢 🚳 🕡 🖪 🧘	
Drawing Title		
Create		
N	lame: Top	
	OK Cancel	


- 6. The map is attached to the end of the cursor. Place the map within the limits of the Title Sheet drawing Project Location Map area. This is located in the middle of the sheet.
- 7. Center the project location using the *Move Reference File* command.
- 8. Once centered clip the map around the Project Location Map area. Select the *Clip Reference* tool and set the *Method* to Element.
- *Note:* The Township and Range Text can be copied into your sheet and positioned where desired. Turn off the reference file level *GIS\_Townships-Text* once the text has been copied. If no Township and Range Text appear within the clipped area it must be copied before clipping.


References (1 of 1 unique, 1 displayed)	- • •
Tools Settings	
E - 12 💫 🛆 🚿 🗇 🗁 🗗 12 🔂 🖧 ቸ 🛙	) 🗙
Slot P D Fle Name Clip Reference	۲ کے 🖸
1 Auans.ugn	~ ~ ~
Scale       1.000000       5280.000000       Rotation       00°00'00''         Offset X       -302.452       Y       -2736.229       Z       0.000         Image: Imag	v Overrides   Depth
New Level Display: Config variable	
Set Reference Clip Boundary	

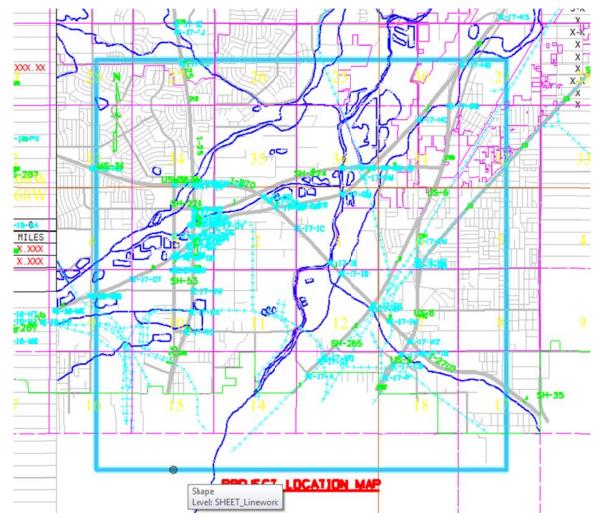

9. *<D>* on the boundary element in the center of the screen (on level *Sheet\_Linework*). This will re-define the limits of the Project Location Map.

A DGNLIB containing the GIS levels has been included in the configuration and has been assigned to all the County Model Files by default. The Reference Levels can be manipulated as desired from the *Level Display* dialog box.

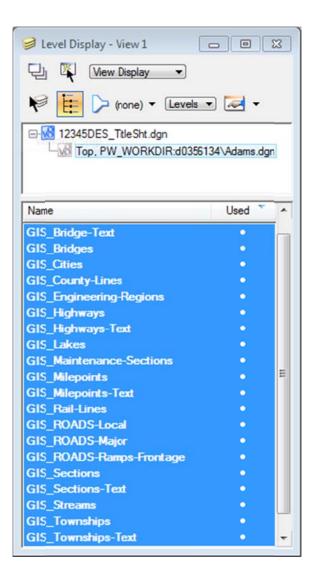

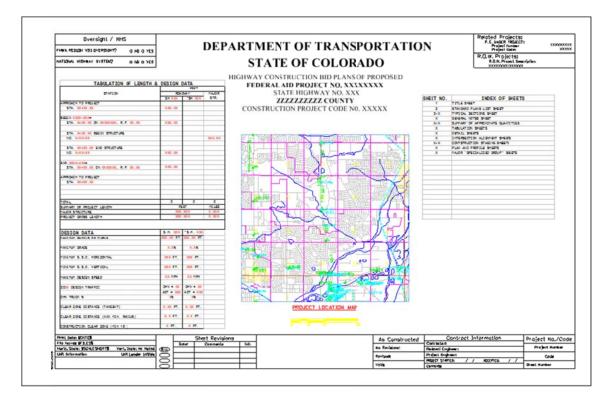

*Note:* If the map is needed at a different scale, other than 1:5280 (1 inch = 1 mile), it can be rescaled through the reference dialog box. It should be noted that the linestyle scale factors and text were defined based on a 1:5280 insertion. The linework and text can be re-scaled within the original Region area, only if it has been saved to your hard drive.