

## InRoads

### *Cross Section -Use Features Only*

**Did you know** that there are two ways to represent a surface in cross sections? If your model is well defined by longitudinal linear features, you can force the cross sections to recognize only the features, ignoring any triangle legs along a feature. Select Surface > Surface Properties to choose how your surface will be represented. Choose Advanced Tab and select Use Features only next to the Cross Sections portion of the Dialog box.