

InRoads

Default Active Surface

Did you know that the last loaded surface will become your active surface? Your RWK file determines the order that the surfaces are loaded. If you want to order your surfaces differently, simply delete the surfaces that you want to re-order, manually load them in the order that you desire and Save your RWK again.

Remember to save your surface if you have made modifications to it, prior to deleting and re-ordering it.