

InRoads

The North Arrow placed by the P&P Generator

Did you know that the **North Arrow** position is set by the Location in Paper Units in the P&P Generator and is set to be placed in the upper right corner of the sheet. This is a rough placement and will likely have to be moved for clarity and conflicts on many sheets. Once the sheets are constructed each sheet should be checked for optimum cell position.

It should also be noted that there is a known bug in the P&P generator which cause the cell to be placed on a no plot level. This can be very frustrating, as you don't notice it until you plot. The North Arrow must be manually moved to the correct level. There is a new command being developed in V2.03 of the Configuration that will allow you to move the North Arrow in a batch mode on many sheets at a time. When it is available we'll advertise more-it should be available after April 17th.