

InRoads

Special Character bearing key-in

Did you know that you can type bearings without the special characters within InRoads dialog boxes wanting bearing key-in values? For example: you can type "S25 17 52E" and the software will automatically convert it to S 25^17'52" E when you press the TAB key.