

## InRoads

### *Update Cross Section Command*

**Did you know** that you can use the Evaluation > Cross Section > Update Cross Section command to refresh surfaces and features in existing cross section sets by selecting the Refresh option. You can add surfaces and features to existing cross section sets by selecting the Display On option and you can remove surfaces and features from existing cross section sets by selecting the Display Off option.