

MicroStation

AccuDraw's Coordinate Readout

Did you know that you can use the Key-In to switch AccuDraw between Northings/Eastings and X/Y? Key-In *accudraw settings northeast* or *accudraw settings xy* to toggle between the two coordinate input values.