

MicroStation

Angular Dimensioning Tool

Did you know that you can force the arrow heads to the inside of an angular dimension using the angle between lines command? If you go to the Dimension Styles > Terminators category and change the minimum leader value to 0 this will swing the arrow heads to the inside of the angled lines, as long as the text will also fall within this space. Remember to select the Reset Style so the setting will return to the default setting of Min. Leader 2.500000 when complete. That way all other dimensioning will act as expected.