

CDOT Annotating Horizontal and Vertical Alignments



This document demonstrates the procedure for displaying annotation for horizontal and vertical alignments. It further presents the workflow for annotating horizontal alignments that contain spiral components.

InRoads can display most alignment annotation as per the M&S standards. However some annotation will require editing and/or repositioning using standard MicroStation commands.


Annotating a Horizontal Alignment

Two InRoads commands are required to annotate a horizontal curve in the CDOT format. The first command (horizontal annotation) is used to display the linework and annotate the tangents. The second command (horizontal curve set annotation) is used to display the PI symbol, short tangents, and curve data. Once the InRoads annotation tools have been used the user needs to modify the text content and positioning to have it appear as per the M&S standards.

Display the alignment


This first example illustrates annotating a circular curve. This is followed by the workflow required for annotating circular curves with spiral transitions.

1. Display the horizontal alignment using **Geometry > View Geometry > Horizontal Annotation**. The View Horizontal Annotation dialog will appear.

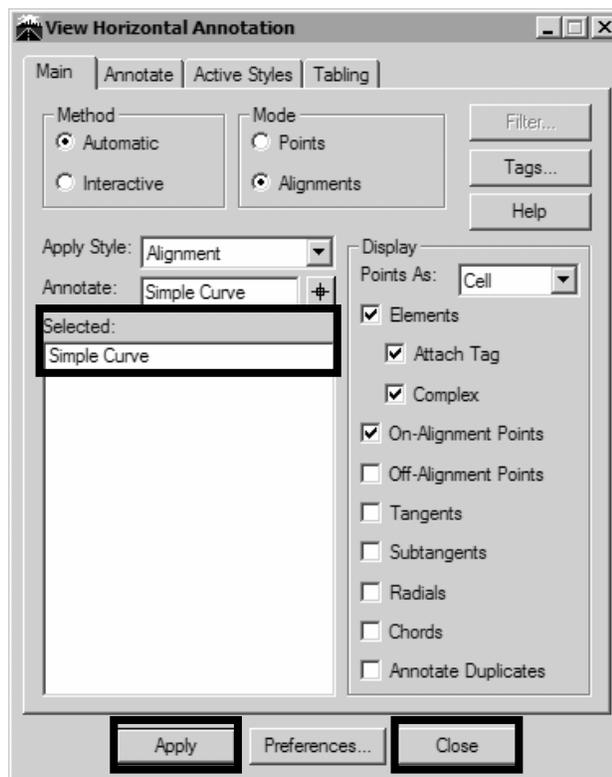

2. Select the correct alignment for display. Then select the **Apply** then **Close** icons.


CDOT Annotating Horizontal and Vertical Alignments.pdf

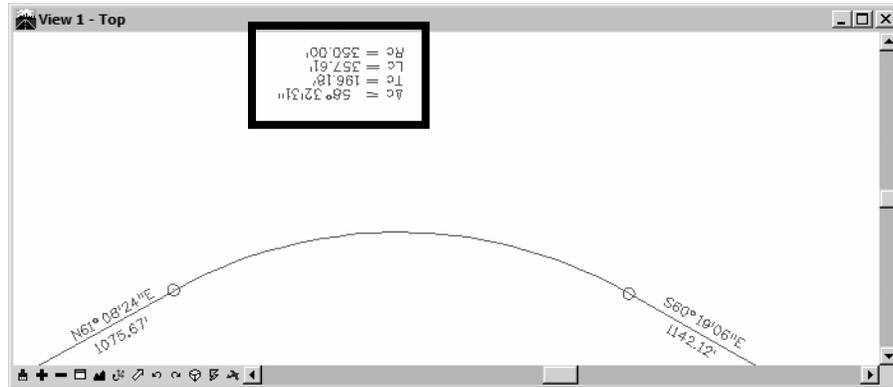

3. Use the MicroStation **Delete** command to remove the curve annotation as this information will be redisplayed in the following steps.


Note: Prior to deleting the curve information, the MicroStation 'Graphic Group' lock must be disabled (**Settings > Locks**). Otherwise the entire alignment will be deleted.

4. Display the Curve Annotation using **Geometry > View Geometry > Curve Set Annotation**. The Curve Set Annotation dialog will appear.
5. Select the correct Horizontal Alignment from the drop down list for Annotation.

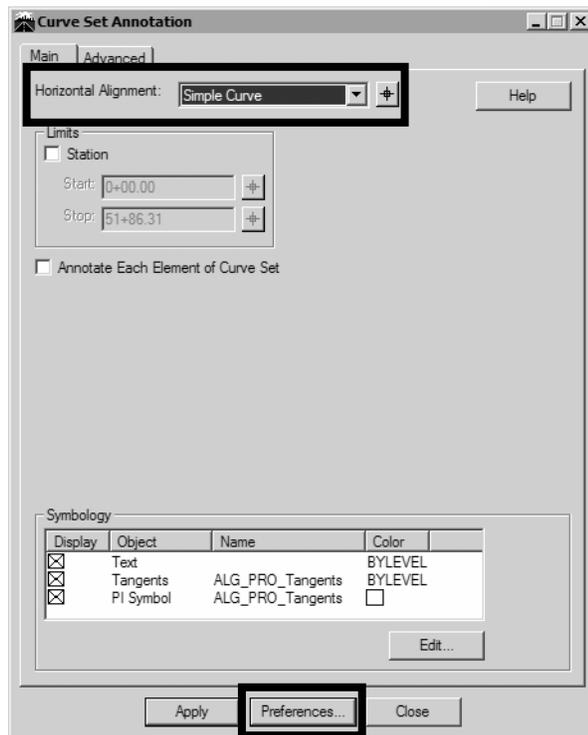

CDOT Annotating Horizontal and Vertical Alignments.pdf

6. Select the **Preferences** button, shown above, and choose the appropriate *Spiral* preference, select **Load** and then **Close**

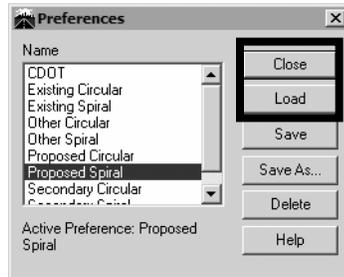


Notes: The spiral preference serves the dual purpose of annotating curves with either circular or spiral components. The central curve information required is common between the two types of geometry.


The InRoads **Write Lock** must be set to *PEN* mode prior to the next command. The curve requires annotation twice and PEN mode will retain previous annotation displays.



7. Select **Apply** on the parent dialog. The central curve is annotated

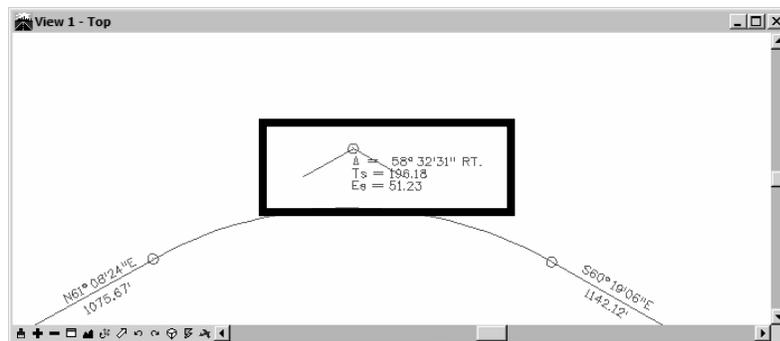


8. Reselect the **Preferences** Button and choose the appropriate *Circular* preference select **Load** and then **Close**

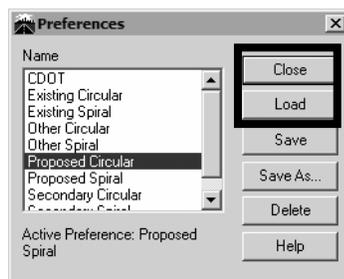

CDOT Annotating Horizontal and Vertical Alignments.pdf

9. Select **Apply** on the Curve Set Annotation dialog. The remainder of the central curve information is annotated

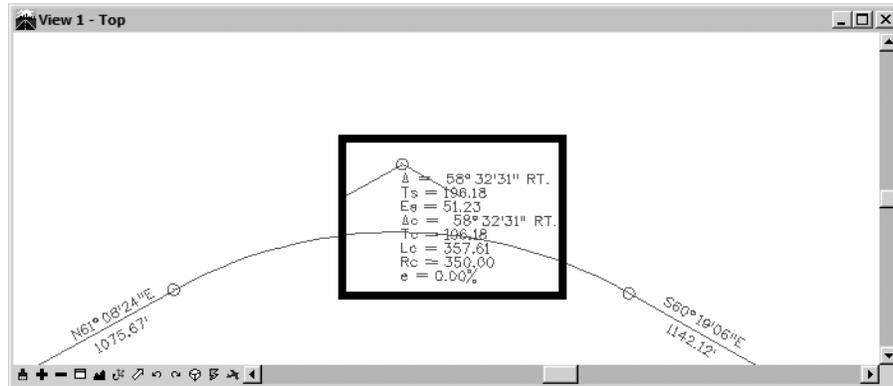


Note: The M&S standards specify that curve information should include the Mean Design Speed (MDS) and Stopping Sight Distance (SSD) information. This information is not annotated by InRoads and will have to be added with MicroStation.


10. Select the MicroStation **Edit Text** command



11. Select the desired text. The text editor will appear allowing the user to add the required information for MDS and SSD.

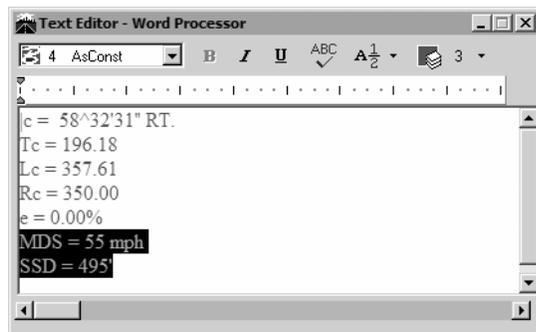


12. Use MicroStation commands to reposition the text as desired.

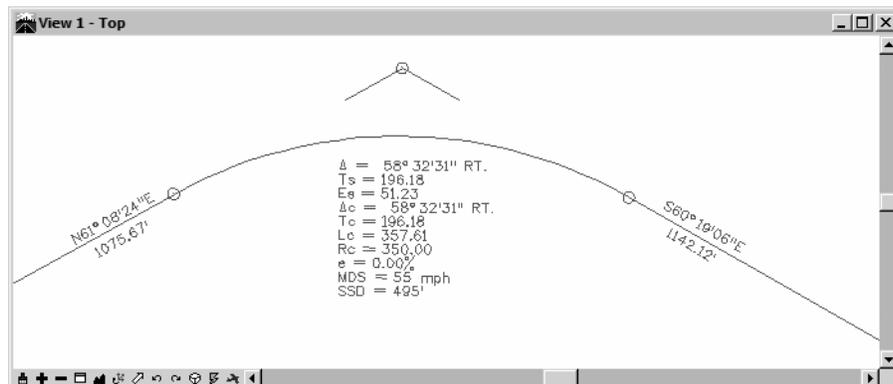

CDOT Annotating Horizontal and Vertical Alignments.pdf


13. If necessary, display the alignment stationing by selecting **Geometry > View Geometry > Stationing**

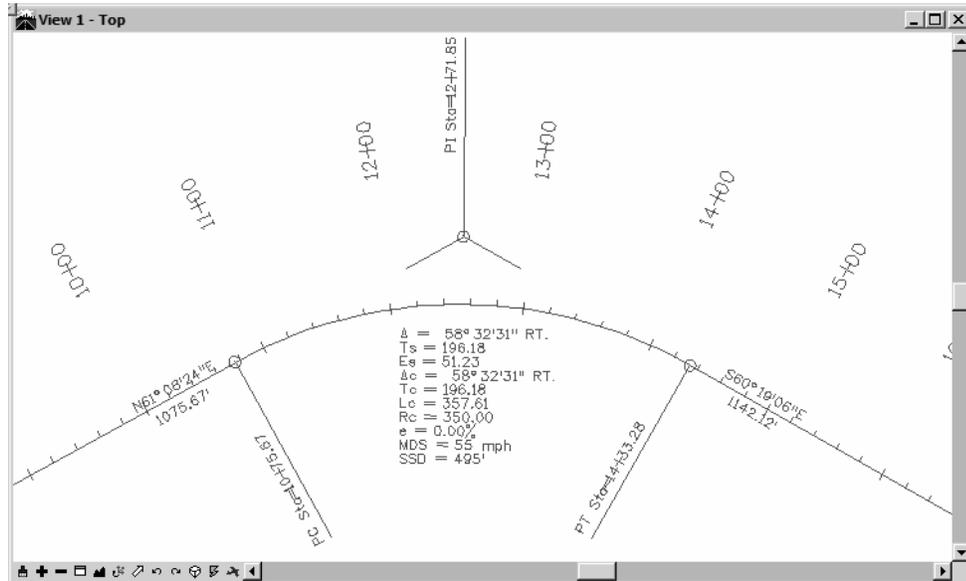


Annotating a Horizontal Curve – Spiral Curve

The workflow is almost identical to the above steps 1-12. The exceptions are noted below.

14. Display the horizontal alignment using **Geometry > View Geometry > Horizontal Annotation**

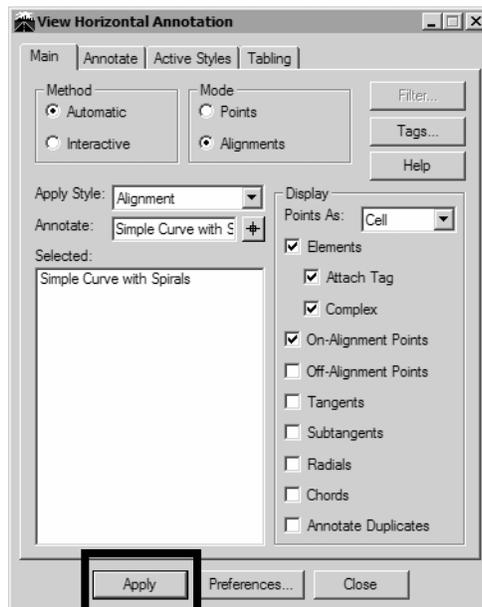


CDOT Annotating Horizontal and Vertical Alignments.pdf

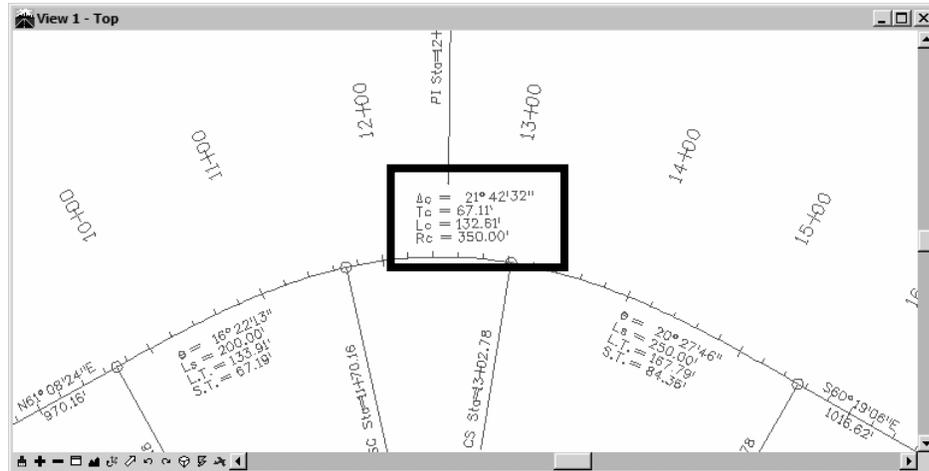

15. Use the MicroStation **Delete** command to remove the central curve data leaving the spiral curve annotation intact.

Note: Prior to deleting the curve information, the MicroStation 'Graphic Group' lock must be disabled (**Settings>Locks**). Otherwise the entire alignment will be deleted.

16. Follow steps 4-12 above to complete the annotation.

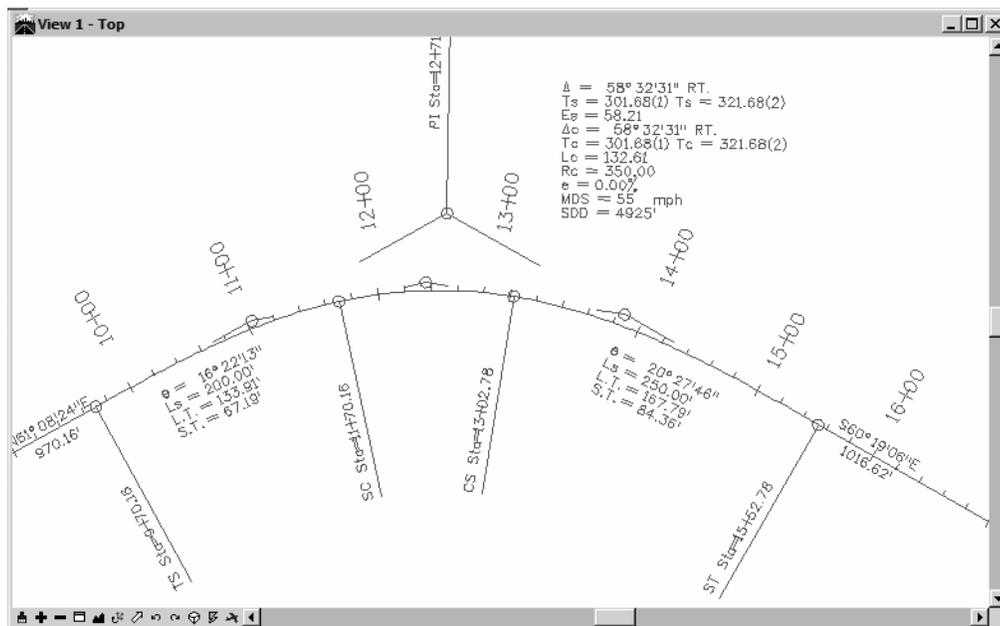


Annotating a Vertical Curve

Display the Alignment


1. The first step is either have, or generate a profile view along the alignment using **Evaluation > Profile > Generate Profile**.

CDOT Annotating Horizontal and Vertical Alignments.pdf

2. Display the vertical alignment using **Geometry > View Geometry > Vertical Annotation...**
3. Select the appropriate profile set, horizontal, and vertical alignments

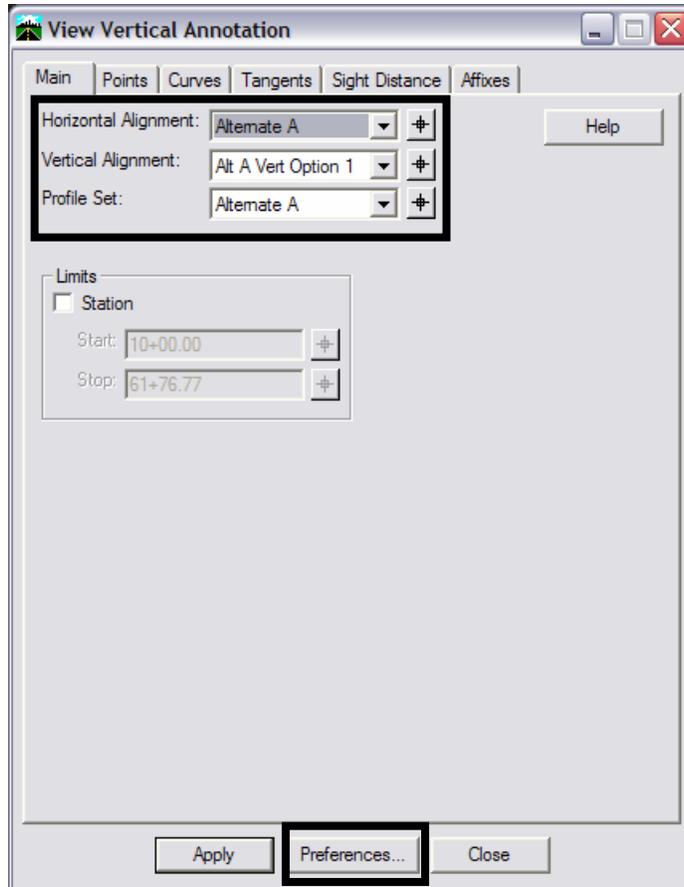


4. **Select the Preferences** icon and load the preference to the appropriate symbology select the **Load** then **Close**

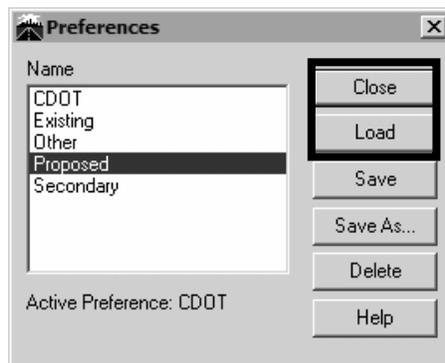


5. Select **Apply** on the View Vertical Annotation dialog, the annotation will be generated.

CDOT Annotating Horizontal and Vertical Alignments.pdf

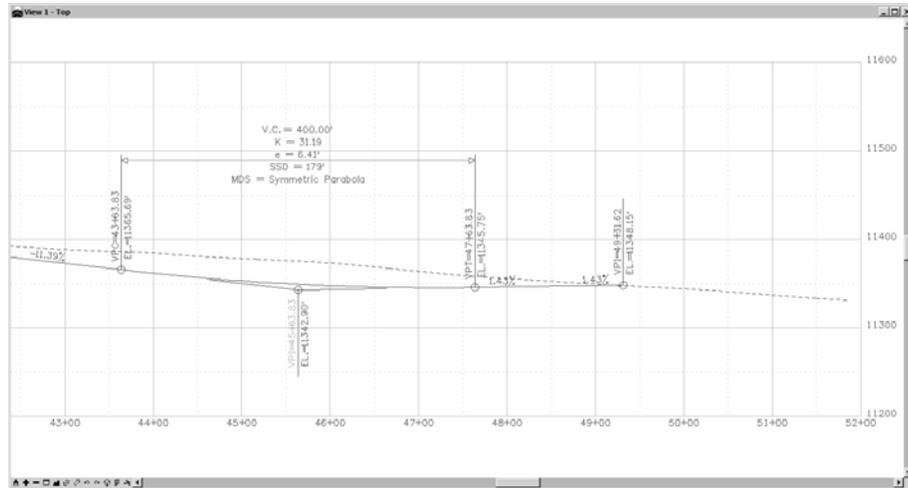

- Using the MicroStation **Move** command, relocate the tangent grade annotation to the short tangent lines.

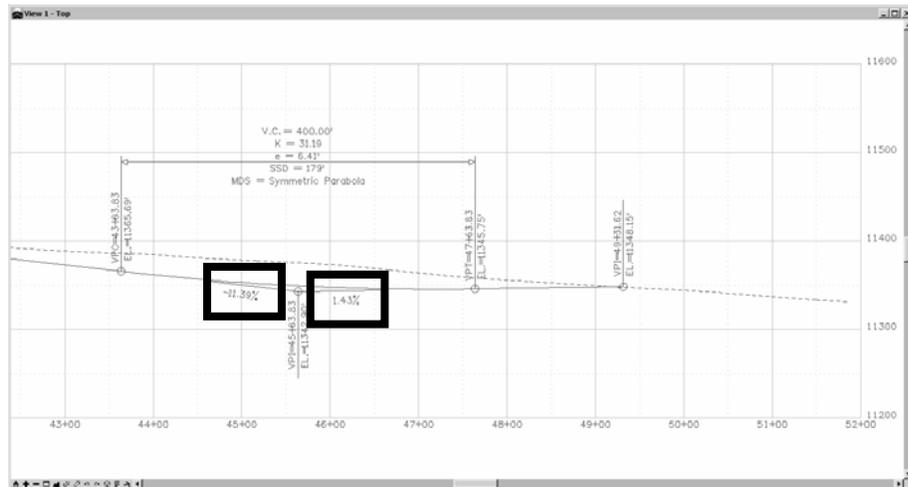

Known Issues

The arrowheads in the vertical annotation are not user definable. They are hard-coded by the software as open arrow heads.