

CDOT Project Configuration File Management




This document explains how the Project Configuration File (PCF) is created, where it is saved, and how to update it. The PCF file defines a specific directory that MicroStation defaults to when opening up a DGN file or referencing model files. PCF files are extremely useful when multiple users are accessing the same project directory across the network, or when DGN files are moved from one directory to another.

Creating the PCF File

1. The PCF file is created when the Create Project Directory Structure program is run. This program is accessed from the Windows Start menu under > All Programs > _CDOT_CADD_Information > **Create Project Directory Structure**.




2. After selecting the Create Project Directory Structure program, the following dialog box will appear.

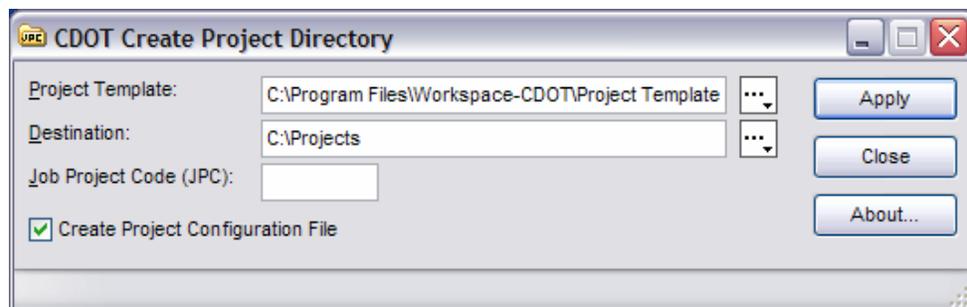

CDOT Project Configuration File Management.pdf

3. Enter the 5 digit Job Project Code (JPC). For this example we will use 99999. Select **Apply**. Verify the Create Project Configuration File box is checked **ON**. This should be on by default. After the program has executed, select **Close**.

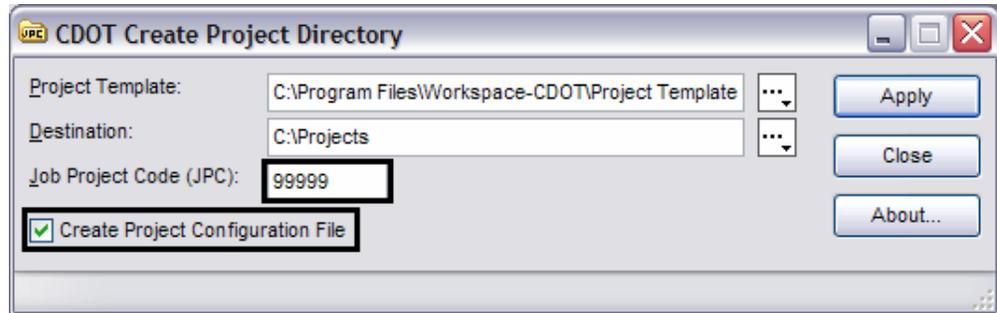


Note: The Create Project program now allows the creation of “M” projects.

4. Open up Windows Explorer again and browse to C:\Projects\99999 to verify the project folder and corresponding folder structure was created.


Opening the PCF File

5. View the PCF file that was created when the CreatePrjDir was executed. In Windows Explorer browse to **C:\Program Files\Workspace-CDOT\Standards-Local\Projects** and open the **99999.pcf** file using Notepad.

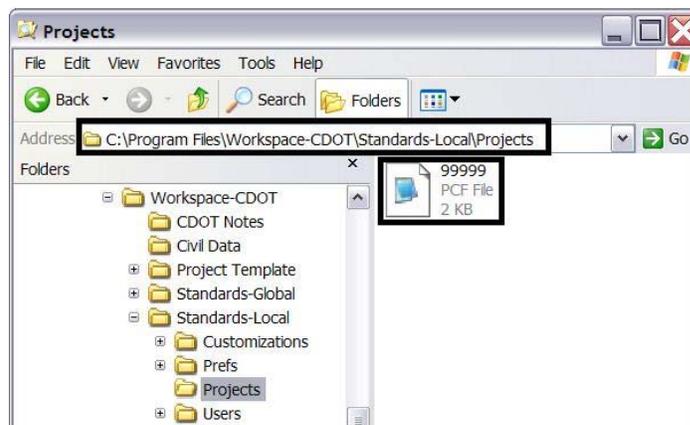

CDOT Project Configuration File Management.pdf

- Notice that the second line of text displays **MS_DEF=C:/Projects/99999/**. The Create Project program places the newly created project location on this line. MicroStation reads this line as a configuration variable and sets the primary Search Path to this location. When MicroStation reads the variable 'MS_DEF' it substitutes the default project location (C:/Projects/99999/). If we look under Reference Files below, all of the paths are set with the (MS_DEF) substitution. This means, whenever you browse for a file to reference (or more specifically a 'model' file), MicroStation will automatically point to the desired directory.

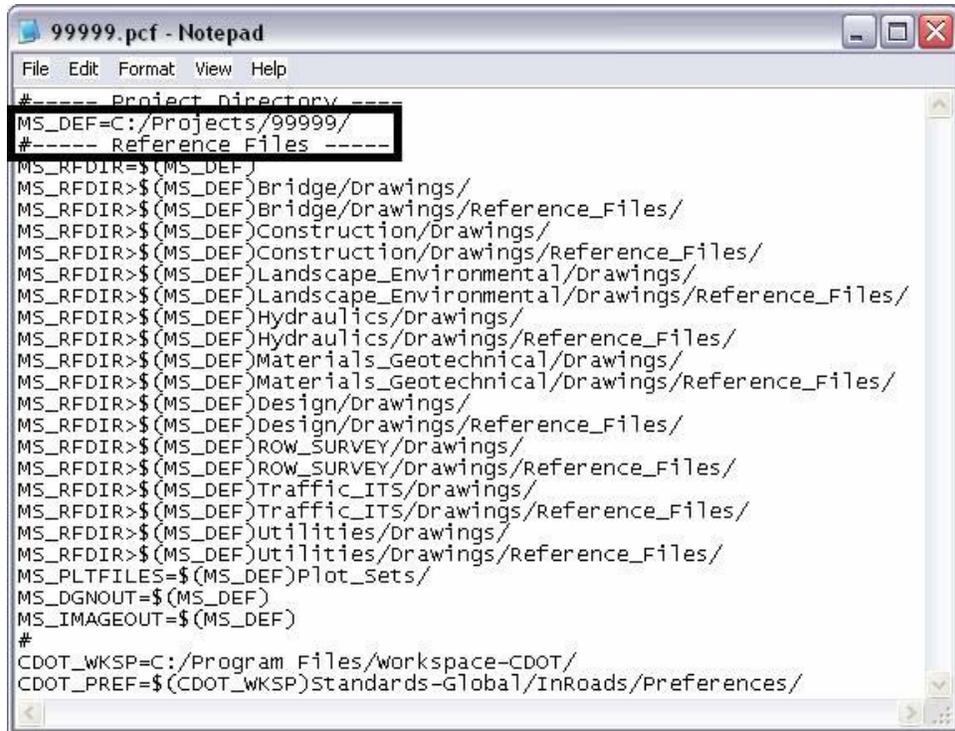


```
99999.pcf - Notepad
File Edit Format View Help
#----- Project Directory -----
MS_DEF=C:/Projects/99999/
#----- Reference Files -----
MS_RFDIR=$(MS_DEF)
MS_RFDIR>$(MS_DEF)Bridge/Drawings/
MS_RFDIR>$(MS_DEF)Bridge/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Construction/Drawings/
MS_RFDIR>$(MS_DEF)Construction/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Landscape_Environmental/Drawings/
MS_RFDIR>$(MS_DEF)Landscape_Environmental/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Hydraulics/Drawings/
MS_RFDIR>$(MS_DEF)Hydraulics/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Materials_Geotechnical/Drawings/
MS_RFDIR>$(MS_DEF)Materials_Geotechnical/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Design/Drawings/
MS_RFDIR>$(MS_DEF)Design/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)ROW_SURVEY/Drawings/
MS_RFDIR>$(MS_DEF)ROW_SURVEY/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Traffic_ITS/Drawings/
MS_RFDIR>$(MS_DEF)Traffic_ITS/Drawings/Reference_Files/
MS_RFDIR>$(MS_DEF)Utilities/Drawings/
MS_RFDIR>$(MS_DEF)Utilities/Drawings/Reference_Files/
MS_PLTFILES=$(MS_DEF)Plot_Sets/
MS_DGNOUT=$(MS_DEF)
MS_IMAGEOUT=$(MS_DEF)
#
CDOT_WKSP=C:/Program Files/workspace-CDOT/
CDOT_PREF=$(CDOT_WKSP)standards-Global/InRoads/Preferences/
```

Editing the PCF File

- If multiple users are accessing the same project directory, the PCF file will need to be distributed to everyone on the team accessing the project directory. Each member of the team should have their own copy of the PCF file and it should be saved to the same location, **C:\Program Files\Workspace-CDOT\Standards-Local\Projects**.

CDOT Project Configuration File Management.pdf


- When team members are sharing the project manager's machine, the path **MS_DEF=C:/Projects/99999/** will need to be updated to reflect the path of the computer that is being shared i.e., **MS_DEF=//CDOTUSER/Projects/99999/** (**MS_DEF=//SMITHS/Projects/99999/** be sure to note the double //). After the edit has been made to the PCF file, select **File > Save** in Notepad.

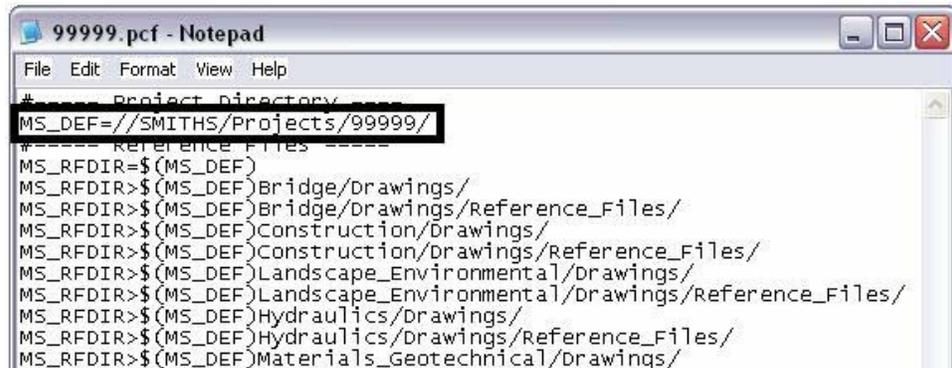

Note: Each person desiring to work on the project must be given appropriate access to the folders they will be working with. The Project Manager should determine the level of Access. Contact the help desk for additional assistance on sharing files and changing security settings.


Using the PCF File with MicroStation

- In the MicroStation Manager, the PCF file can be selected from the Workspace portion of the dialog box on the **Project** pull-down menu.

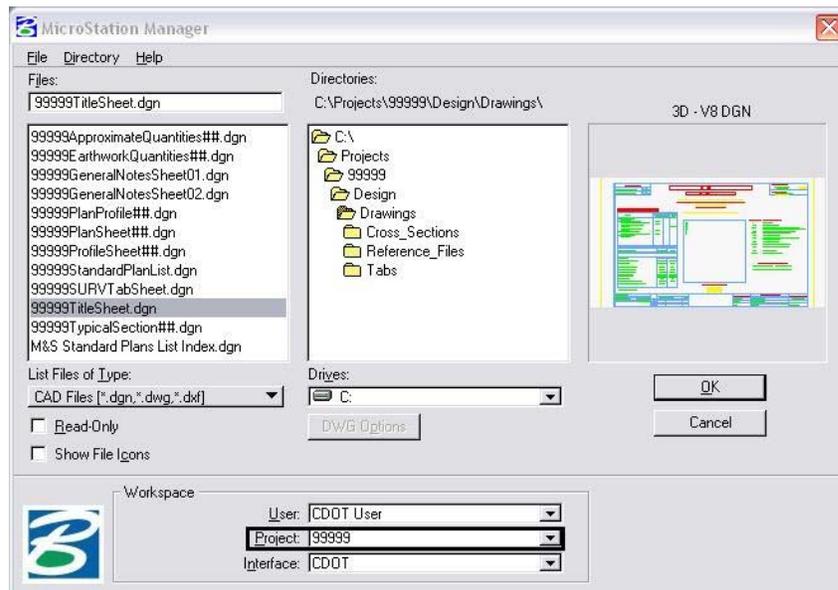


CDOT Project Configuration File Management.pdf

10. If you are working on multiple projects, you will have more than one PCF file to choose from. You can easily switch between projects with this pulldown. Select the arrow to expand the display and choose which project to work on.

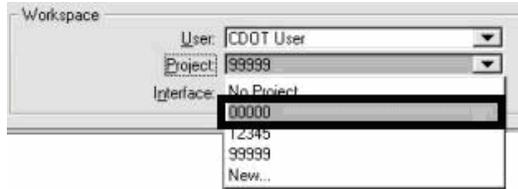

11. The file path in MicroStation will be redirected to the project folder after the desired project has been selected. All dialog boxes within MicroStation that require a path to be defined will default to the root directory chosen at the **Workspace > Projects** location.

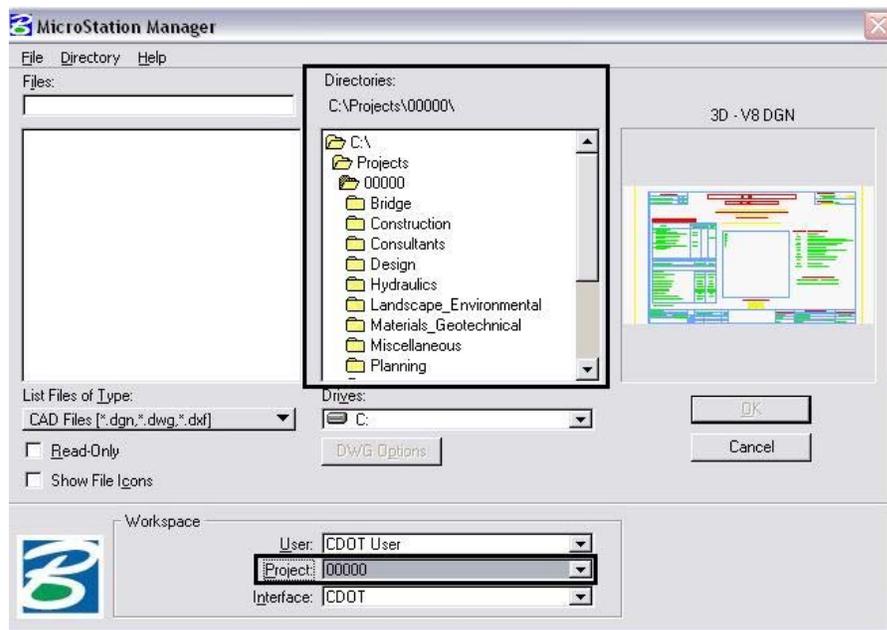

CDOT Project Configuration File Management.pdf

If your folder structure changes and/or files are moved to different locations than initially pathed to, you can update your reference file attachment location here without having to reattach the files in MicroStation. Simply edit the reference file paths in the PCF and open MicroStation. You will notice that the files are now being found. It should be noted that Save Full Path when referencing files within MicroStation, should never be used if you want the PCF file changes to take affect.

Old Structure

```
MS_RFDIR>$(MS_DEF)/Design/Design_Data/  
MS_RFDIR>$(MS_DEF)/Design/Drawings/  
MS_RFDIR>$(MS_DEF)/ROW_SURVEY/Deliverables/  
MS_RFDIR>$(MS_DEF)/ROW_SURVEY/Design_Data/
```

New Structure

```
MS_RFDIR>$(MS_DEF)Design/Drawings/  
MS_RFDIR>$(MS_DEF)Design/Drawings/Reference_Files/  
MS_RFDIR>$(MS_DEF)ROW_SURVEY/Drawings/  
MS_RFDIR>$(MS_DEF)ROW_SURVEY/Drawings/Reference_Files/
```